



## **SPECIAL INSTRUCTIONS FOR USE**

1. Install valve horizontally with solenoid coil upright.
2. Use only fluids with low moisture content.  
Presence of moisture in cryogenic fluid increases the possibility of solenoid valve malfunction.
3. Slight leakage between valve body and bonnet may occur during initial use. This is normal as the PTFE gasket shrinks at low temperature.  
If leakage persists tighten the bolts and/or solenoid base.